
Akai S700/X7000

**Receiving
samples
from the
S700**

SampleVision uses the same driver for the S700 as for the X7000. We will refer to the sampler as the S700 here, meaning whichever unit you have.

To get a sample from the sampler, take the following steps:

- Make sure the correct sampler driver is active in SampleVision.
- Once you have determined the sample number for the sample that you want, perform the following steps:
- Select Get from Sampler from the Sample pulldown menu or press the F7 function key on the PC keyboard.
- The sample selector will appear on the screen containing a list of the 16 possible sample numbers.
- Using the scroll bar, locate the sample number that you wish to receive and click on that position.
- Click on OK or press the PC's Enter key.

**Sending
samples to
the S700**

Once you have determined the destination sample number, take the following steps:

- Make sure the correct sampler driver is active in SampleVision.
- Select Send to Sampler from the Sample pulldown menu or press the F8 function key on the PC keyboard.
- The sample selector will appear on the screen containing a list of the 16 possible sample numbers.
- Using the scroll bar, locate the sample number that you wish to send to and click on that position.

**Setting loops
with the S700**

- Click on OK or press the PC's Enter key.

The loop settings for a given sample can be set three different ways:

- The current loop settings for a sample will be sent along with the sample when you send the whole sample to the sampler.
- If the loop is turned on, the loop start and end will be updated in the sampler when you double-click on a loop marker in the sample edit mode of SampleVision.
- The desired loop type, loop start, and loop end will be updated automatically when changed in the loop editor mode of SampleVision.